

Quick Installation Guide of Wi-Fi Module

1. Product Appearance



①Status light ②DB9 serial por

Status Light:

Power supply LED (Red)	ON	Nomal
	OFF	Abnomal
Status LED (Green)	Flicker	Nomal
	Always ON	Fail to connect with the data server
	OFF	Fail to communicate with the device successfully

2. Installation and Connection

Please install and connect the Wi-Fi webcard according to the following steps:

- Step 1: Please remove the RS-232 protective cover .
Step 2: Insert the WiFi module into RS-232 and fix it with screws(refer to picture 2-1)



Picture 2-1


Step3: Connect Wi-Fi web card with the system by referring to picture 2-2.



Picture 2-2

3. Configuration

①Connect Wi-Fi hot spot
(For example:SAJ_Manage_XXXX)
Password:12345678

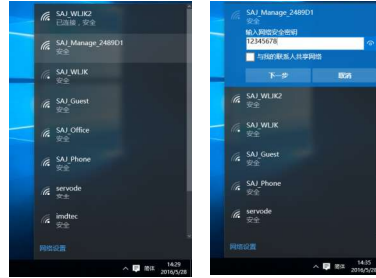

Picture 3-1

②Use IE explorer to access: <http://10.10.176.1> (account: admin, password: admin), Click "LANGUAGE" in the top right corner.



Picture 3-2

③Click "Setup guide" and set the Wi-Fi according to the prompt message. After setting, the Wi-Fi module will reconfigure the wireless network.



Picture 3-3



Picture 3-4



Picture 3-5

④The data of inverter will be uploaded to the server after Wi-Fi is connected with network . Please logon <http://webportal.saj-electric.com> and register account for viewing.